source: www.ovh.co

BMW Navigation

Quick Reference Card

⚠ Please note!

The Usage of the navigation system does not exempt the driver from his responsibilities. Pay attention to the local traffic regulations. Traffic regulations have always priority over any advice given by the navigation system.

Data entries should only be made when the car is not moving or before driving off.

Controls


Repeat current advice

Cursor key right; select options

Enter key; confirm a selection


Cursor key left; select options

Select alternative route

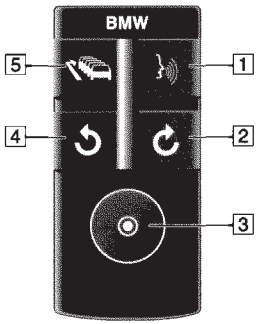

Only options in white characters are selectable.

Switching on / off

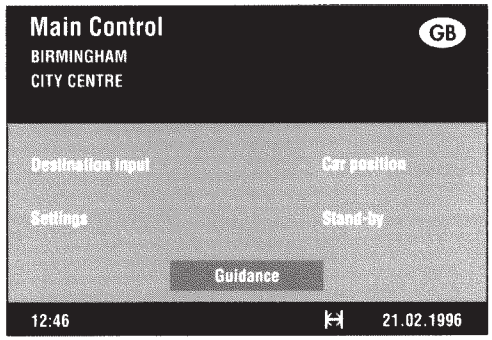

The navigation system is switched on and off together with the ignition.


The display first shows a legal disclaimer. After confirming with the Enter key the "Main Control" menu is displayed.

After some seconds the system is initialised and you can select the navigation functions.

Move the cursor (highlighted field) with one of the cursor keys to the desired menu option and confirm with the Enter key.

Menu options, which are not available appear in black characters.

Destination Input

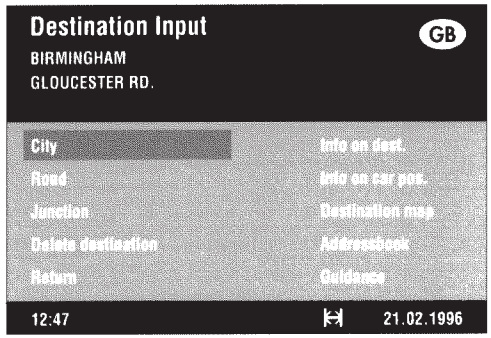

To enter the destination you want to travel to.


1. Select "Destination Input" in the "Main Control" menu and confirm.
2. Select "City" and enter the city name by use of the typewriter or by "List". As soon as a city name is entered which matches to a data base entry you can confirm it with "OK". Now you can select "Guidance". Guidance is done to the city border if you only enter the city name.
3. You can enter a road name or select a data base entry by use of the "Info on dest." or "Info on car pos." options (for example "City Centre").
4. If you like you can enter a junction with the "Junction" option.

Note: If you use the typewriter, only letter entries are possible which are valid after comparison with the data base. If the system finds a unique entry, the name is completed automatically.

Guidance

If a valid destination address is entered and you selected "Guidance" from the "Main Control" menu or the "Destination Input" menu, the guidance screen appears.

See the following example for the information displayed in the guidance screen:

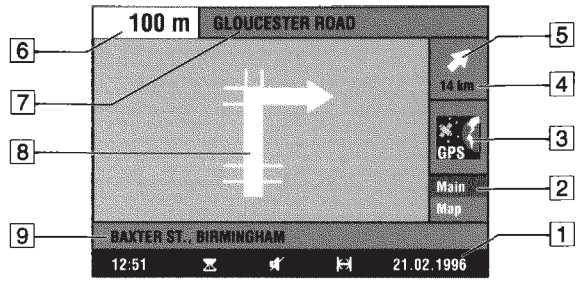

[1] Status line: Time / Date / route planning criterion / voice on/off.

[2] Options menu: "Main" for "Main Control" menu or "Map" for map display for guidance.

[3] GPS status: As soon as valid position data is received by the GPS a small green satellite appears in the logo.

[4] Distance to the destination (Real driving distance as soon as a route is planned).

[5] Direction to the destination.

[6] Distance to the next guidance advice (change of direction).

[7] Road you have to enter next (Turn into street).

[8] Guidance information (advice).


[9] Current car position, city and road name, if stored in the data base.

The system automatically switches to map display when leaving the digitized area.

In this case no route planning is possible. Drive in direction of a displayed (digitized) road to ensure route planning and guidance functions again.

To repeat the current acoustical advice press the "Repeat message" key [1] on the remote control.

Source: www.ow.no

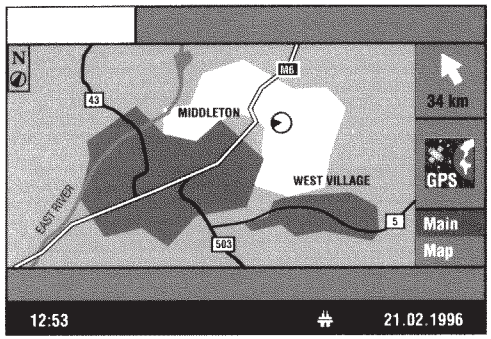

The map shows the current car position and the driving direction (black icon).


As soon as you reach a digitized place the system switches back to guidance and plans a new route.

If you don't follow a certain guidance advice or you can't follow it on traffic demands, the system automatically plans a new route.

Guidance with map display

If you select "Map" from the options menu in the guidance screen a map of the momentary area around the car position appears in the display. A simplified guidance advice is shown in the upper right corner of the screen.

The currently planned route is displayed in white.

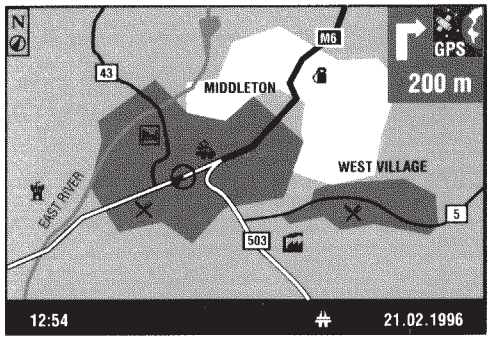


By pressing the Enter key you can select a menu that offers you the following options:

Positioning: Change the map display between "North up" and "Head up".

Scale: To change the scale of the map.

Return: To return to the guidance screen.

System Settings Menu

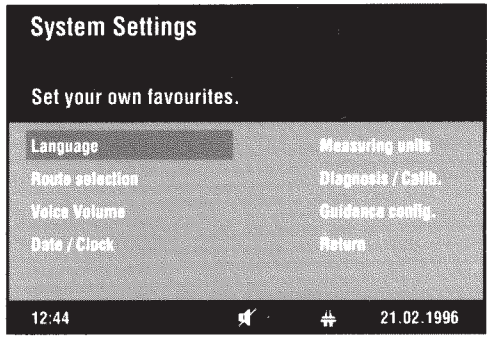

To set your own preferences:

Language: Select the language of display messages and acoustical advice.

Route selection: To select the criteria to influence the route planning (for example "Optimized for travel time").

Voice Volume: To adjust the reference volume of acoustical advice.

Date/Clock: To enable date and time display and to enter the date and time (only necessary after power supply has been interrupted).

Measuring units: To select the measuring units ("Metric" or "Anglo-american")

Diagnosis/Calib: For diagnosis and calibration of the system (for example if you change the tyres)
WARNING: Calibration of the system should only be performed by a BMW service!

Guidance config.: To select the information shown in the guidance screen.

Return: To leave this menu.

Stand-by

Select "Stand-by" to switch off the display and to suppress acoustical advice of the navigation system. The system remains active in the background.

Press one of the cursor keys or the Enter key on the remote control to enable visual and acoustical advice again.

Car position

For information or to correct the momentary position. The current car position is shown in the display. You can change this position manually. Changing the car position is only necessary, if the navigation system shows an obviously wrong position of the car.

Alternative route

You can force the navigation system to calculate an alternative route during guidance for the next approx. 10 km by pressing the "Alternative route" key [5] on the remote control. This can be helpful to get around traffic jams.

Adjusting the reference volume

Make sure that the volume control on the top of the LCD display is set to the mid position.

1. Select option "Voice volume" from the "System Settings" menu.
2. Press the Enter key. You hear a buzzing sound with the current volume of acoustical advice.
3. Adjust the desired setting with the cursor keys.
4. Confirm your choice with the Enter key.

Best.-Nr. 01 21 9 789 961 englisch

3112 316 0780.1
02.96/ri