Installation Instructions for Accessories


Additional Sheet
Spoiler for M-Technics Shock-absorber Protective Covering E36 (USA and Canada) to Installation Instuctions 0129 978 6327

Expert Knowledge is required.


Best.-Nr. 01 21 9 786 909 VI/92 Printed in Germany

source: www.ow.no

Note
This additional sheet descripes the fixing on of the Number plate holder for the BMW ` 3er Serie E36´ (USA and Canada).
The additional sheet begins from illustration F 36 51 239 on side 8 of the Installation Instructions Order-Nr. 0129 978 6327.

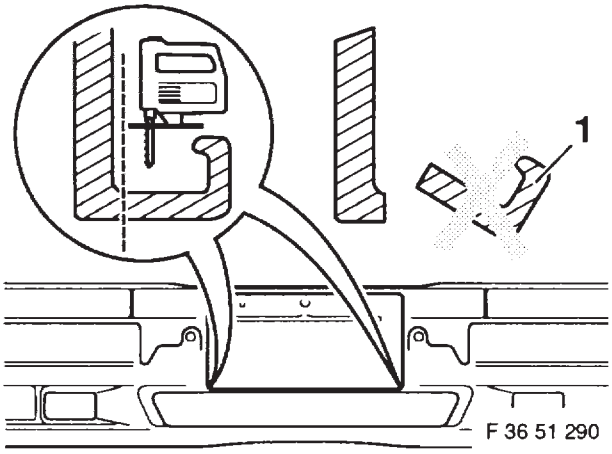


Cut-off (1) protruding tips from Number plate holder as shown above.

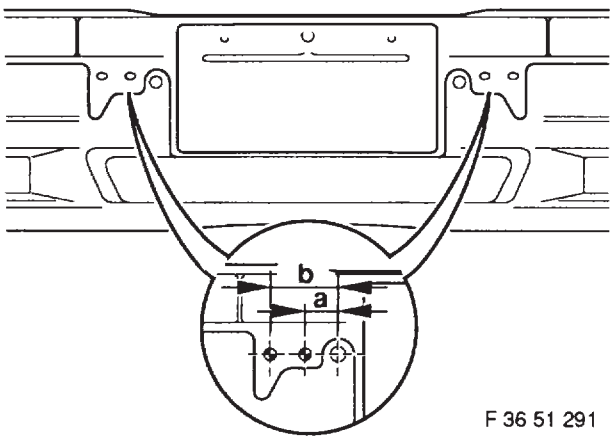


Note
Magnification in illustration shows the left side, right side is to be carried out as mirror image.

Drill 7mm Diameter holes (shown above) as fixing points for Number plate holder.
a = 25 mm
b = 75 mm

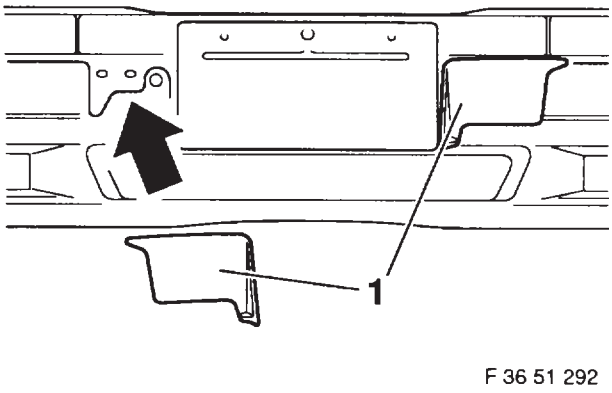

Push Number plate holder (1) in drilled holes on Frontapron as shown above.

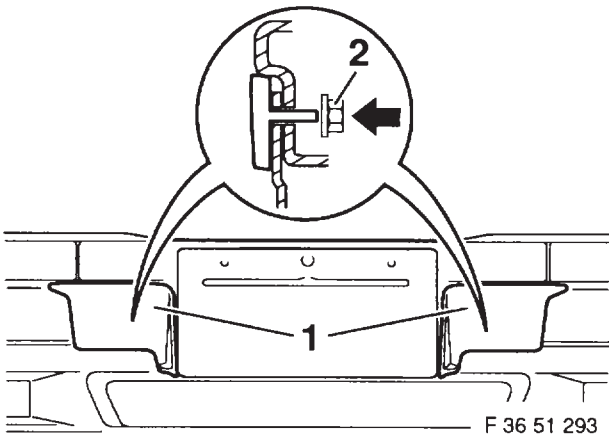

Fix Number plate holder (1) with Hexangonal bolts (2) as shown above.

Note
After fixing the Number plate holder, continue with step 5 of the Installation Instructions “Shock-absorber construction”.

 source: www.ow.no